


Elite Bath
FROG FAUCET
INSTALLATION INSTRUCTIONS

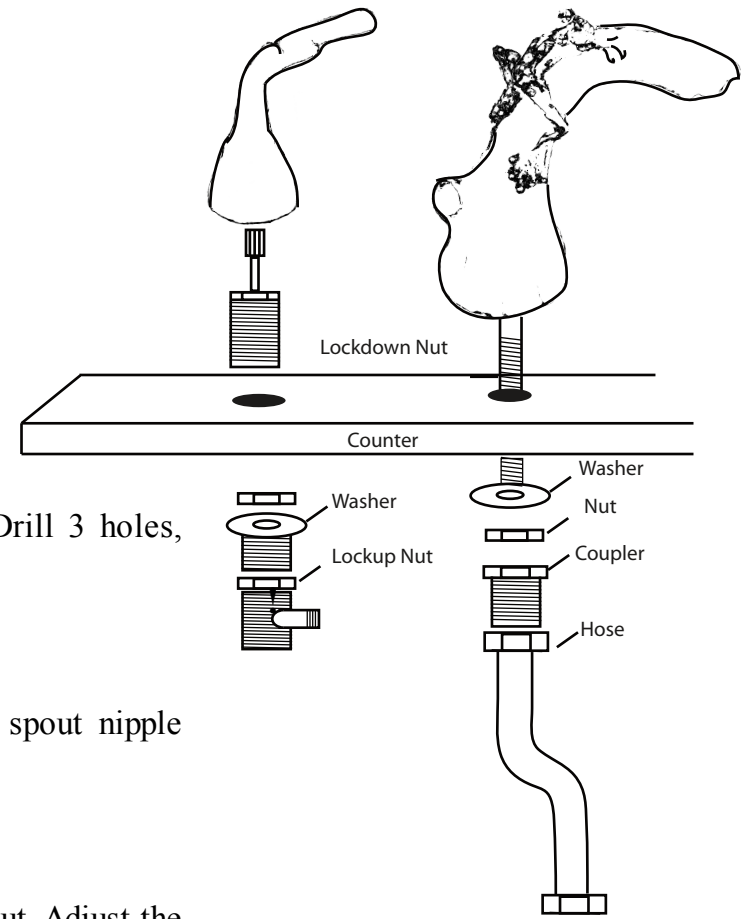

If applicable, turn off the water supplies and remove the old faucet and drain. Drill 3 holes, each 1 1/4" in diameter, for the spout and valves.

2) Place a ring of silicone around each of the holes in the deck or the sink.

3) Install the spout by:

a) Removing the nuts and washers from the spout nipple(s).

b) Setting the spout into position and re-installing the washers, nuts onto the spout nipple underneath countertop.

May not need all washers included, depending on your counters thickness!

4) Install the valves ("Hot" on the left and "Cold" on the right) by:

a) Removing the top nut from each valve.

b) Inserting the valve body into its hole from the underside and installing the top nut. Adjust the height of the valve stem to the correct position according to the "Dimension Guide" on spec page.

5) Fasten the valves into locked position using rubber washer then lock nut to fasten to underpart of counter. Lock handles onto valve broach with allen screws provided.

Install the hoses (**Hoses not provided**) between the valve bodies Do not overtighten.

7) Connect the supply hoses (not included) to the bottom of the valves and the tee on the spout. (**Tee Not Provided**) and check for leaks.