

# Installation of Chameleon Stainless


Due to the weight of the Chameleon Stainless farm sinks we recommend that it is placed in the cabinet by more than 1 person.

Our farm sinks are fabricated by hand so measurements may vary slightly , we recommend preparing counters etc. after you receive your sink.

To undermount this sink you will need to frame in support structures or a sub-counter to hold its weight.

Construct a wood support and frame to fit inside the cabinet opening. Allow adequate Clearance for faucet holes and sink basin between the support frame members.

**CAUTION:** The wood support and frame for the sink must sufficiently support 60+ lbs (Approximate weight of the stainless sink when full and installed garbage disposal).

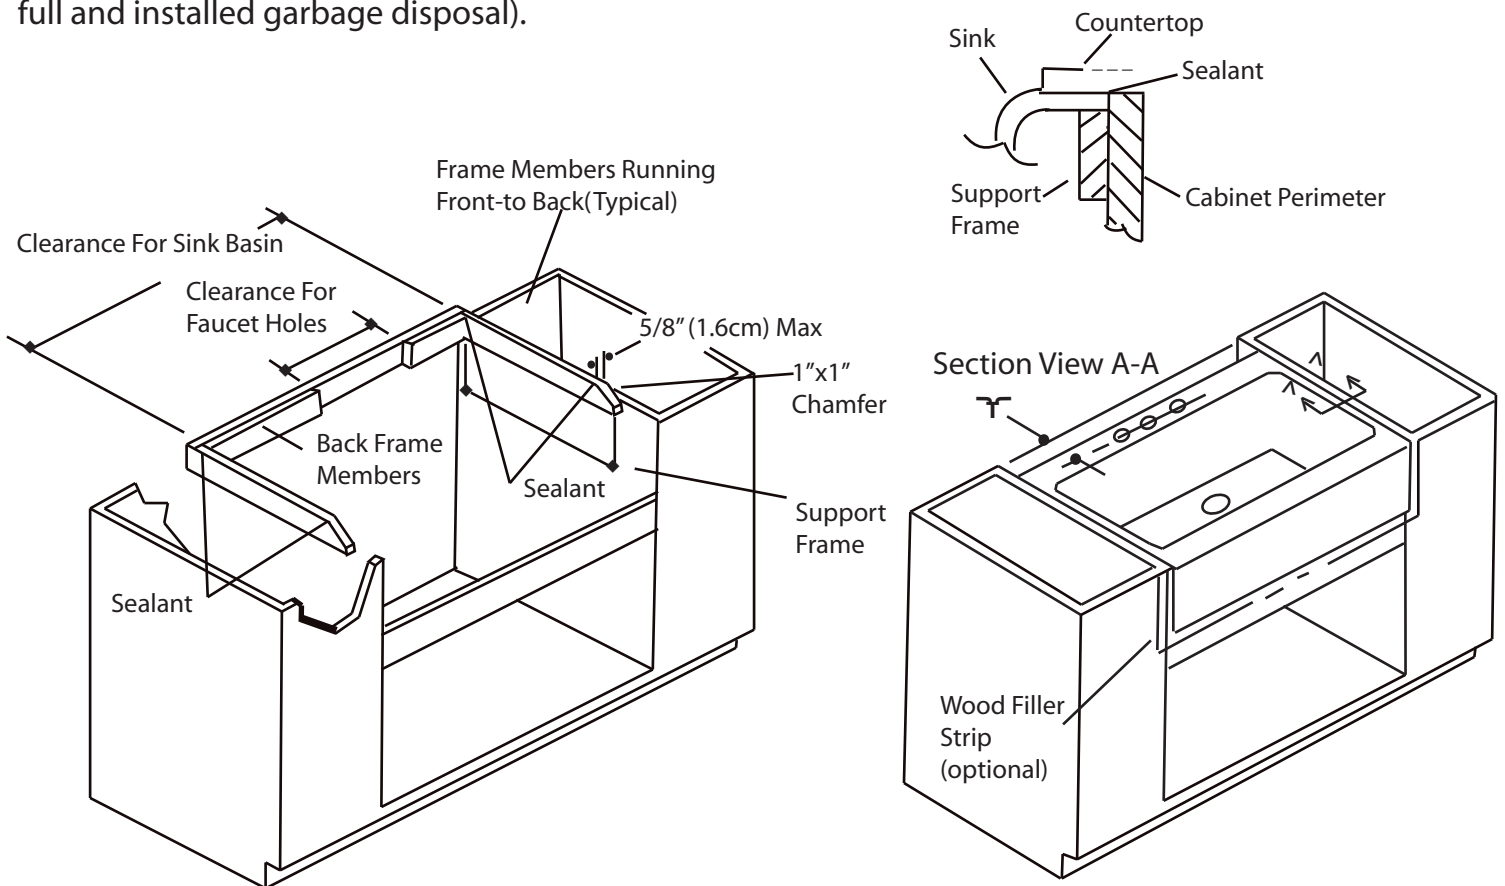

There should be a hole cut in the front of the cabinet face to accommodate the apron front as well. Measure sink apron and cabinet opening to make sure apron will fit into cabinet opening. If necessary , sand opening or add wood filler strips. Apron should rest against the cabinet face. This sinks apron can protrude 2 - 2 1/4" away from the cabinet wall, **NOTE you MUST measure to accommodate this variance to determine actual hole depth for sink as well.**

We recommend an experienced cabinet maker build the new cabinet or modify the existing cabinet for this sink.